


# ECLIPSE "RLT" INDIRECT AIR HEATING BURNER

Dimensions are subject to change without notice. Contact Eclipse for certified prints prior to fabrication or installation.

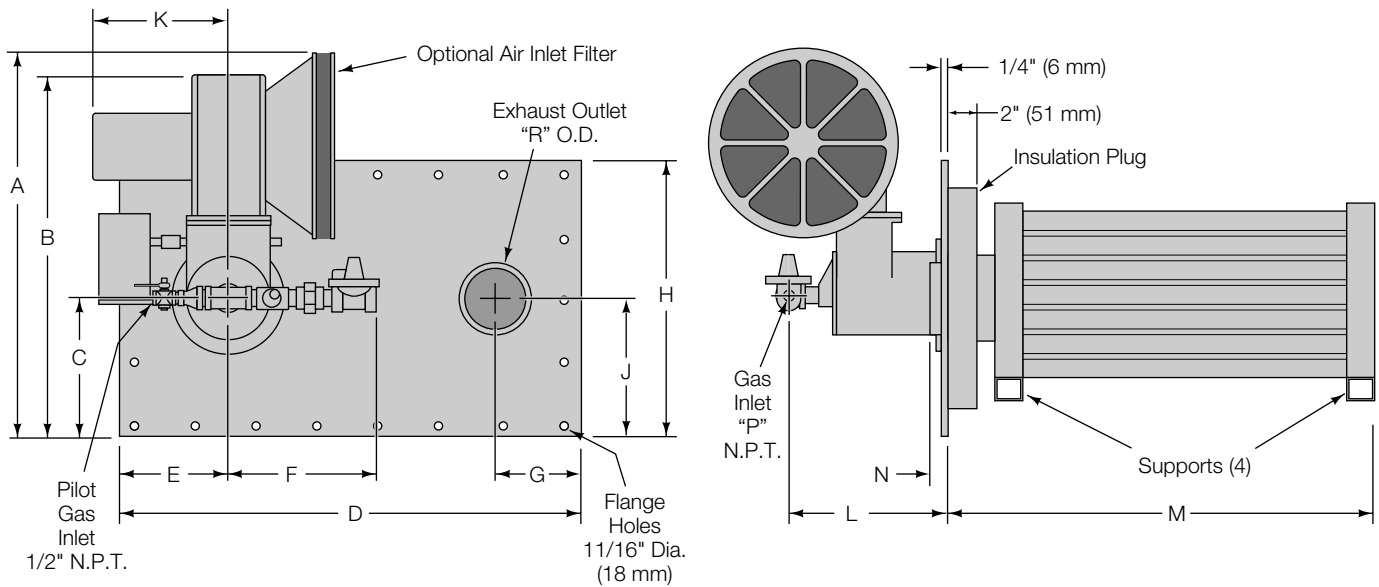

Units can be supplied with blower and exhaust positions reversed from those shown. Unit shown is for left-to-right air flow.

### Dimensions, Inches

Model	A	B	C	D	E	F	G	H	J	K	L	M	N	P	R	Net Weight (Lbs.)
50 RLT	36.38	34.25	12.80	35.04	10.83	15.56	9.25	25.59	16.73	12.81	14.24	30.12	2.20	1	7.09	370
100 RLT	36.38	34.25	12.80	35.04	10.83	15.56	9.25	25.59	16.73	12.81	14.24	41.34	2.20	1	7.09	392
200 RLT	39.10	36.89	15.45	42.72	10.24	15.56	7.09	30.91	21.46	12.81	14.24	48.03	2.20	1	7.09	635
300 RLT	42.19	42.12	19.69	47.24	15.75	15.56	8.85	39.37	27.76	13.31	14.24	50.59	2.20	1	9.84	745
400 RLT	51.00	49.93	23.62	64.96	19.29	20.56	13.19	47.24	34.25	13.38	18.43	61.81	2.20	1-1/2	10.43	1087
500 RLT	51.00	49.93	23.62	64.96	19.29	20.56	13.19	47.24	34.25	13.38	18.43	72.83	2.20	1-1/2	10.43	1142
600 RLT	51.00	49.93	23.62	64.96	19.29	20.56	13.19	47.24	34.25	14.38	18.43	84.65	2.20	1-1/2	10.43	1252
700 RLT																Contact Eclipse for details
800 RLT																Contact Eclipse for details


### Dimensions, Millimeters

Model	A	B	C	D	E	F	G	H	J	K	L	M	N	P	R	Net Weight (Kg.)
50 RLT	924	870	325	890	275	395	235	650	425	325	362	765	56	1	180	168
100 RLT	924	870	325	890	275	395	235	650	425	325	362	1050	56	1	180	168
200 RLT	993	937	380	1085	260	395	180	785	545	325	362	1220	56	1	180	178
300 RLT	1072	1070	500	1200	400	395	225	1000	705	338	362	1285	56	1	250	258
400 RLT	1295	1268	600	1650	490	522	335	1200	870	340	468	1570	56	1-1/2	265	338
500 RLT	1295	1268	600	1650	490	522	335	1200	870	340	468	1850	56	1-1/2	265	518
600 RLT	1295	1268	600	1650	490	522	335	1200	870	365	468	2150	56	1-1/2	265	568
700 RLT																Contact Eclipse for details
800 RLT																Contact Eclipse for details



## RLT Sideplate Mounting Flange Dimensions

Dimensions are subject to change without notice. Contact Eclipse for certified prints prior to fabrication or installation.

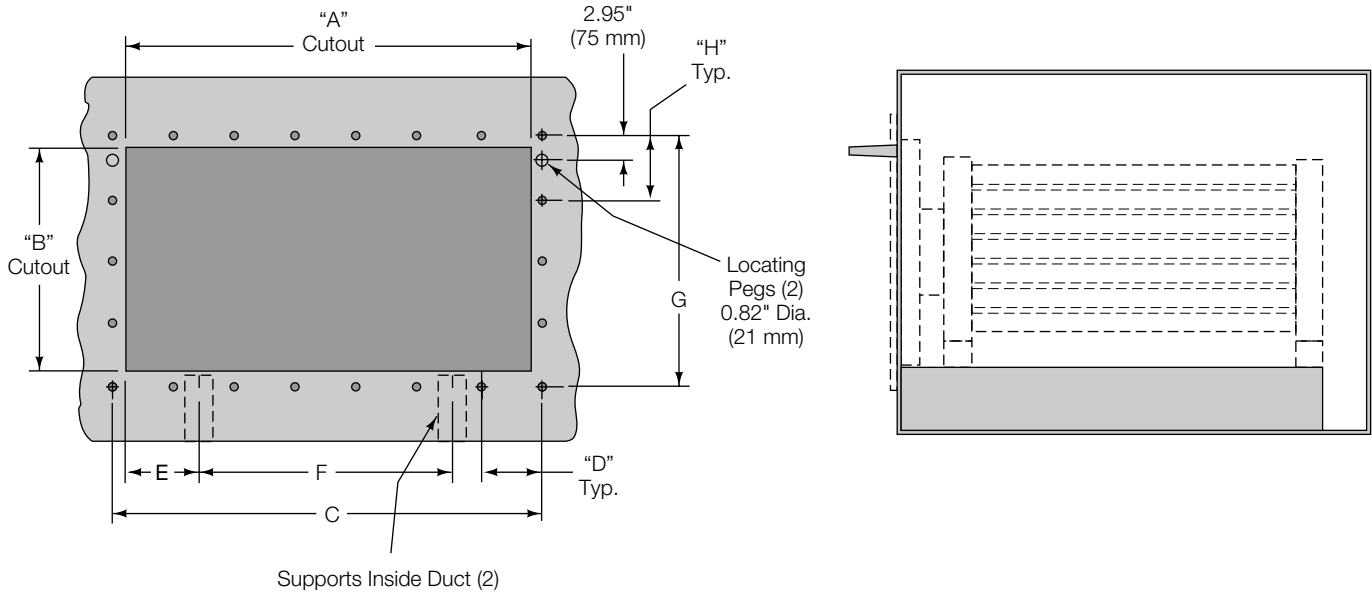

Dimensions shown are for unit configured for left-to-right air flow; right-to-left unit is reverse of unit shown.

### Dimensions, Inches

Model	A	B	C	D	E	F	G	H
50 RLT	31.50	22.05	33.07	8.27	9.06	17.91	23.62	5.91
100 RLT	31.50	22.05	33.07	8.27	9.06	17.91	23.62	5.91
200 RLT	38.78	26.38	40.75	8.12	12.36	24.00	28.94	9.65
300 RLT	43.70	35.83	45.28	9.06	16.93	23.62	37.40	7.48
400 RLT	59.49	43.70	63.00	7.87	20.70	28.54	45.28	9.06
500 RLT	59.49	43.70	63.00	7.87	20.70	28.54	45.28	9.06
600 RLT	59.49	43.70	63.00	7.87	20.70	28.54	45.28	9.06
700 RLT	Contact Eclipse for details							
800 RLT	Contact Eclipse for details							

### Dimensions, Millimeters

Model	A	B	C	D	E	F	G	H
50 RLT	800	560	840	210	230	455	600	150
100 RLT	800	560	840	210	230	455	600	150
200 RLT	985	670	1035	207	314	610	735	245
300 RLT	1110	910	1150	230	430	600	950	190
400 RLT	1510	1110	1600	200	525	725	1150	230
500 RLT	1510	1110	1600	200	525	725	1150	230
600 RLT	1510	1110	1600	200	525	725	1150	230
700 RLT	Contact Eclipse for details							
800 RLT	Contact Eclipse for details							