

Eclipse ThermJet



Burners

Model TJ0500
Version 2

PARAMETER	BURNER VELOCITY		MODEL TJ0500
Maximum input Btu/hr (kW)	Medium & High Velocity		5,000,000 (1465)
Minimum Input, on-ratio Btu/hr (kW)	Medium & High Velocity		500,000 (146)
Minimum Input, fixed air Btu/hr (kW)	Medium & High Velocity		100,000 (29)
Gas inlet pressure required "w.c. (mbar) • Fuel pressure at gas inlet (Tap "B" – see page 3)	High Velocity	Nat. Gas Propane Butane	13.5 (34.0) 14.0 (35.0) 13.0 (33.0)
	Medium Velocity	Nat. Gas Propane Butane	5.5 (14.0) 6.0 (15.0) 5.5 (14.0)
Air inlet pressure required "w.c. (mbar) • 15% excess air at maximum input (Tap "A" – see page 3)	High Velocity	Nat. Gas Propane Butane	18.5 (46.0) 17.5 (44.0) 17.5 (44.0)
	Medium Velocity	Nat. Gas Propane Butane	10.0 (25.0) 10.0 (25.0) 10.0 (25.0)
High Fire Flame Length Inches (mm) (measured from end of combustor)	High Velocity	Nat. Gas Propane Butane	75 (1900) 90 (2285) 85 (2160)
	Medium Velocity	Nat. Gas Propane Butane	100 (2550) 100 (2550) 105 (2670)
Maximum flame velocity ft/s (m/s) • 15% excess air, at maximum input	High Velocity		500 (152.4)
	Medium Velocity		250 (76.2)
Maximum combustion air temperature	300° F (149 °C) For higher temperatures, use TJPCA (Data 206)		
Flame detection	U.V. scanner only. (Available for all combustors.)		
Fuel	Natural Gas, Propane, Butane <i>For any other mixed gas, contact Eclipse for orifice sizing.</i>		

- All information is based on laboratory testing in neutral (0.0" w.c.) pressure chamber. Different chamber size and conditions may affect the data.
- All information is based on standard combustor design. Changes in the combustor will alter performance and pressures.
- All inputs based upon gross calorific values.
- Eclipse reserves the right to change the construction and/or configuration of our products at any time without being obliged to adjust earlier supplies accordingly.
- Plumbing of air and gas will affect accuracy of orifice readings. All information is based on generally acceptable air and gas piping practices.
- Do not install the burner with the gas inlet rotated 90° clockwise with respect to the air inlet if operating on natural gas using a flame rod.

Performance Graphs

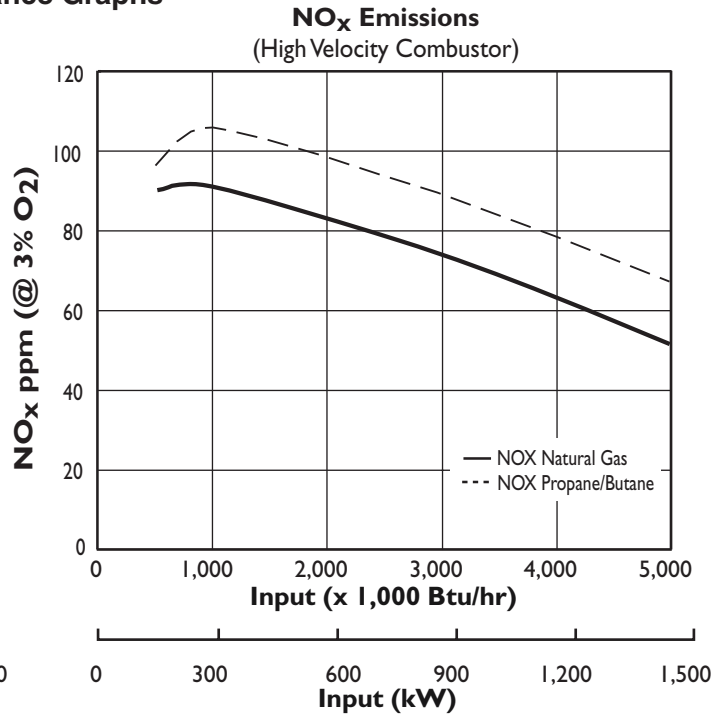
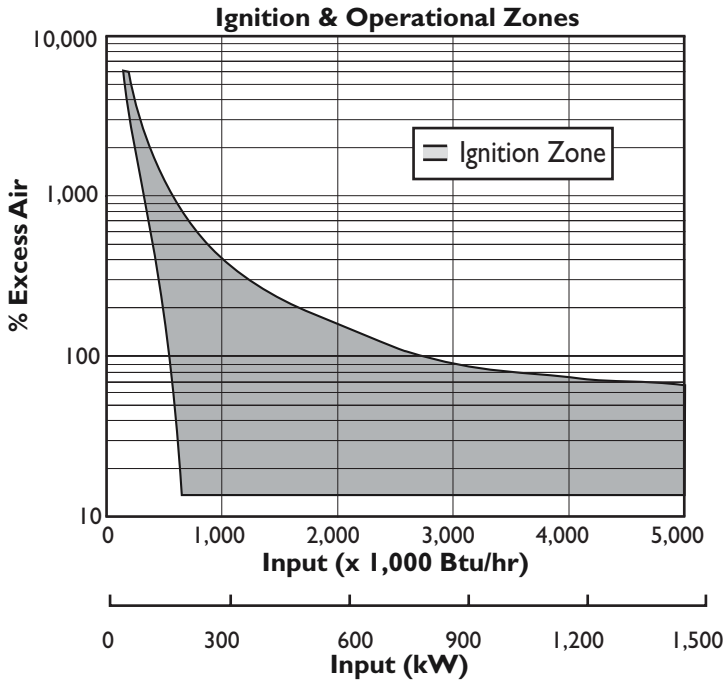


Correction factor for medium velocity combustor is 1.20
 On Ratio: Combustion air is adjusted to 3% O₂ at any given input.

Emissions from the burner are influenced by:


- fuel type
- combustion air temperature
- firing rate
- chamber conditions
- percent of excess air

For estimates of other emissions, contact Eclipse.

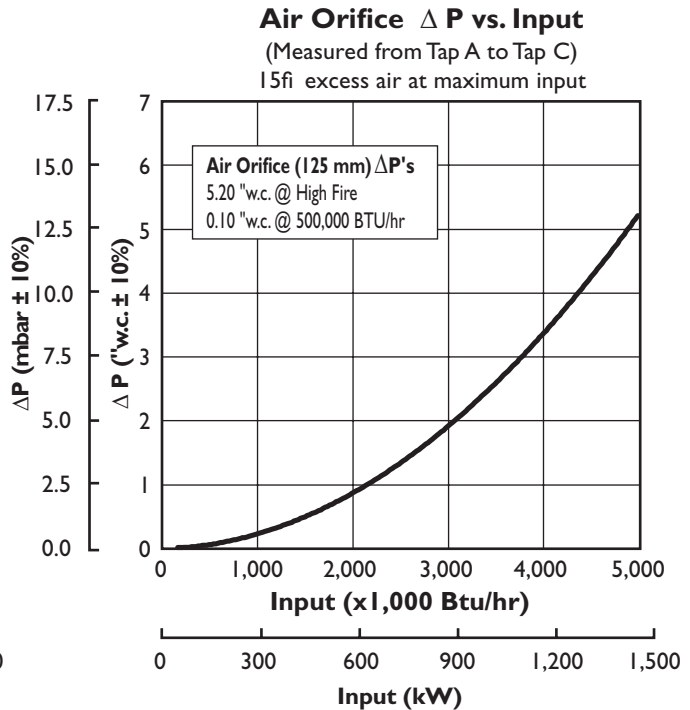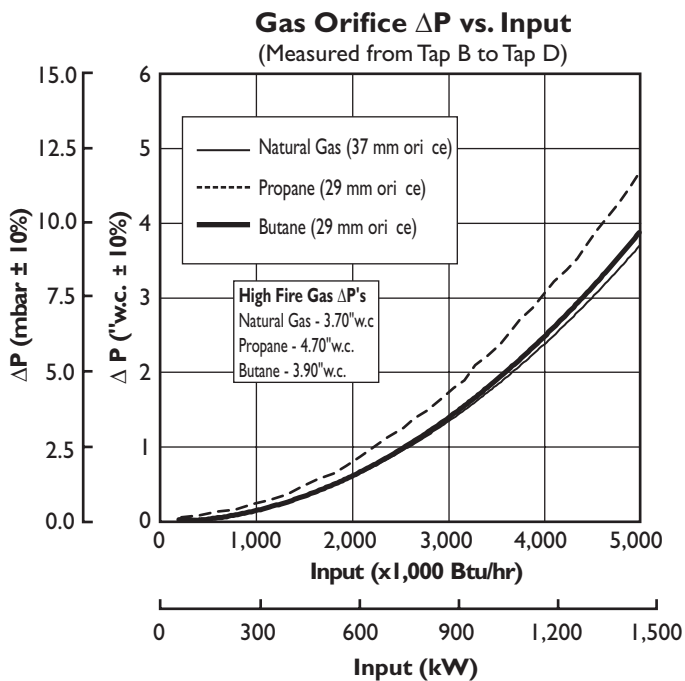


Dimensions & Specifications Millimeters (Inches)

Burner Housing

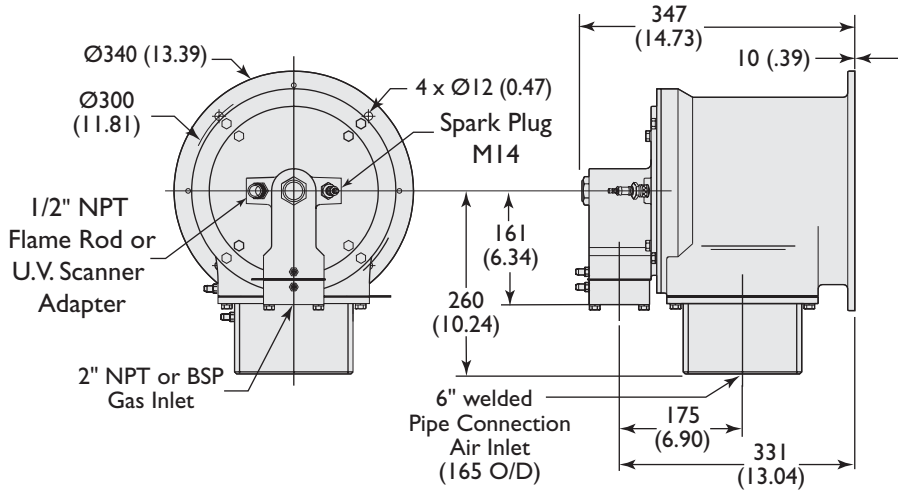


Tap Locations

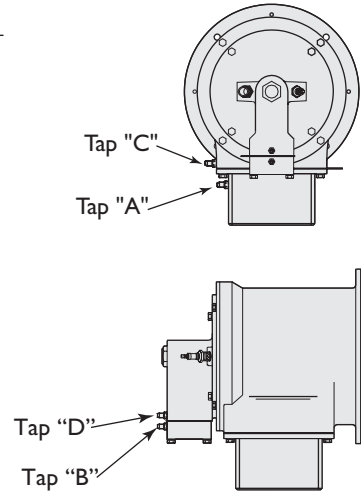

Burner weight less combustor: 93 lb (42 kg)


Combustor

Exhaust outlet diameter : High Velocity : $\text{Ø}125$ (4.92)
Medium Velocity : $\text{Ø}177$ (6.97)

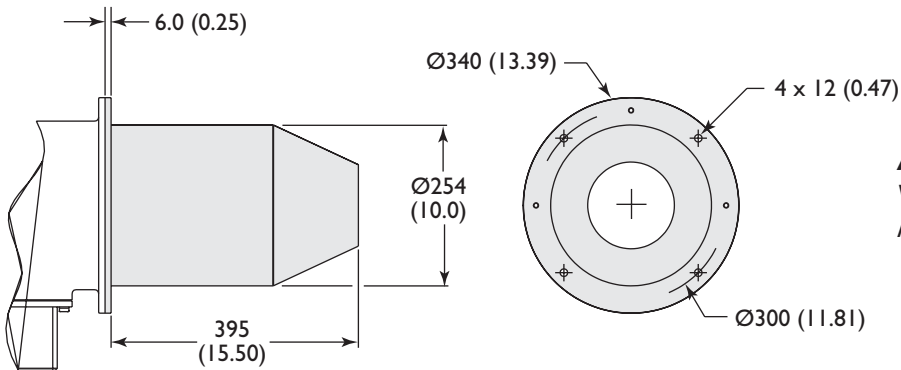


Alloy Tube (AISI 310)

Weight : 14.5 lb (6.6 kg)
Max. Chamber Temp : 1,750 °F (950°C)

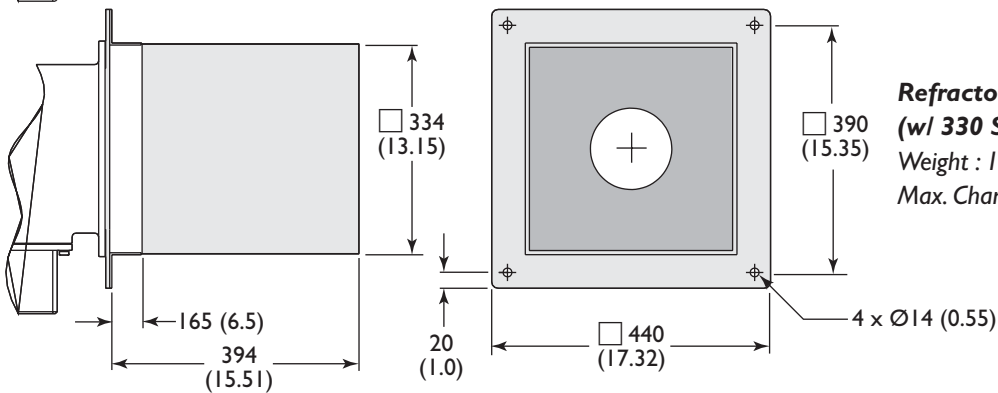

Refractory Block (w/ 330 SS wrapper)

Weight : 160 lb (73 kg)
Max. Chamber Temp : 2,800 °F (1535°C)

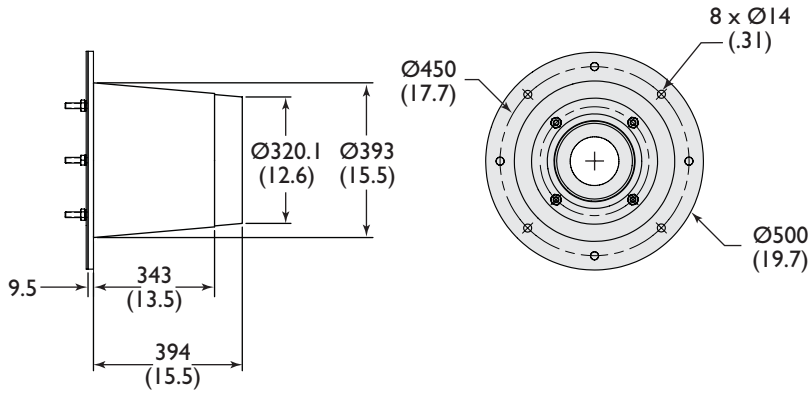

Down Firing Block
 Weight: 1b 185 (83.91kg)
 Max. Chamber Temp: 2800°F (1535°C)



Offered By:

Power Equipment Company
2011 Williamsburg Road
Richmond, Virginia 23231
Phone (804) 236-3800
Fax (804) 236-3882

www.peconet.com