


ECLIPSE BLAST TIPS



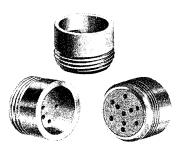

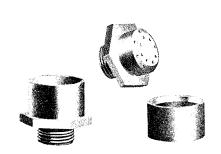

STANDARD STEEL TIPS

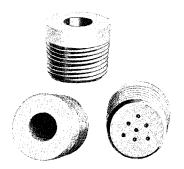

LAVA BLAST BURNER TIPS

Blast Tip is the name given any small burner to handle combustible mixtures of gas and air under sufficient pressure to cause a blast-like flame. In general, Blast Tips are built to burn without the use of any refractory tunnel and are either self- piloting or built to prevent the flame from blowing away under normal conditions of operation.

Due to the marked differences in combustion characteristics of various combustible gases, it is not always possible to use the same tip on all gases. A tip that may have good flame retention when burning coke oven gas may not hold a natural gas flame at all

Blast Tips are suitable for a variety of applications. They can be used in groups to heat a wide area such as the bottom of a kettle, or mounted down a length of pipe as in a core oven.

OPERATION

All capacities in this bulletin are based on a stoichiometric air/gas mixture at a mixture pressure of 5" w.c. For other mixture pressures, see the table below. If the ratio of air to gas is less than stoichiometric, the gas capacity will be correspondingly increased, but the air necessary to complete combustion will have to be available in the oven.

If Blast Tips get hot during operation, they will heat the mixture before it is burned, increasing its volume and thus reducing capacity. In addition, heating of the tips will cause pre-

ignition and backfiring which may damage the tips through excessive heating. If there is a danger of over-heating, alloy steel tips may be used, and in some cases lava tips are satisfactory.

PILOTING

Unless tips are very close together and a fast burning gas is being used, each tip must be lit individually. This may be done by a manual torch.

CAUTION: It is dangerous to use any fuel burning equipment unless it is equipped with suitable flame sensing device(s) and automatic fuel shut-off valve(s). Thermocouple flame monitoring must not be used on burners with capacities greater than 150,000 Btu/hr. Eclipse can supply flame monitoring systems or information on alternate sources.


INSTALLATION

The illustrations below show various ways of installing blast tips in pipes. For gas-mixture capacity of standard pipe see page 3.


Long manifolds may be made of extra-heavy pipe, although this will reduce pipe capacity. Eclipse can fabricate any burner length or configuration desired. Contact your Eclipse representative for details.

Mixt Press	1	1/2"	1"	2"	3"	4"	5″	6″	7"	8″	9″	10"	11"	12"	13″	14"	15″	16"	20″	25"	30"
Multi	plier	.316	.447	.631	.775	.893	1.00	1.109	1.18	1.26	1.34	1.41	1.48	1.55	1.61	1.67	1.731	1.79	2.00	2.24	2.45


TYPICAL PIPE BURNER APPLICATIONS



Pipe burner showing tips screwed directly into pipe. Suitable for small capacities and short lengths.



Pipe burner showing tips mounted in extension fittings. Reducing fittings may also be used where large tips of small capacity are used.



Pipe burner showing tips mounted in street ells.



ECLIPSE COMBUSTION

ROCKFORD, ILLINOIS 61103 (815) 877-3031

CANADA: ECLIPSE THERMAL SYSTEMS HOLLAND: FLAMECO-ECLIPSE ENGLAND: ECLIPSE THERMAL SYSTEMS

ECLIPSE NO-BLOW BLAST TIPS

SERIES "K"







No-Blow Tips were specially designed to meet the need for a tip that would operate satisfactorily on any kind of gas. The flame will not blow off from these tips when used with the slow burning natural or bottle gases nor will they back-fire when used with the fast burning coke oven or water gas. They answer the need for a universal tip that would not have to be changed when the gas supply was changed. They operate best when used with correct mixtures of air and gas but will handle even widely incorrect and varied mixtures. They may be used in completely enclosed chambers without secondary air provided they are not allowed to over-heat. If ample secondary air is available, capacities may be as much as doubled. The standard tips are steel but heat resisting alloy tips can be supplied for higher operating temperatures.


APPLICATIONS

No-Blow Tips have been successfully used for fire-polishing, core ovens, baking ovens, various types of kettles, cookers, small boilers, low temperature annealing ovens, meat smokehouses, air heaters, and in many other installations where a large number of small flames were desirable.

No-Blow Tips may be used in clusters in special castings or arranged along pipes either straight or shaped. They may be screwed into the pipe directly or mounted in standard fittings such as ells or couplings. If mounted directly in the pipe, there is greater danger of preignition as the gas burning in the tip tends to heat the mixture in the pipe directly. If in doubt as to the suitability of No-Blow Tips for your application, send us a print or sketch giving all information on temperatures, kind of gas and cycles of operation, and we will gladly advise.

LIMITATIONS

No-Blow Tips should not be used where they will be subjected to radiant heat or any temperature above 750°F. unless alloy tips are used. With alloy, the temperature limit is around 1200°F. although care must be taken to avoid preignition.



"NO-BLOW" TIP

DIMENSIONS & SPECIFICATIONS

Catalog	Size of Pipe	Port Area	Capacities	D	Weight Each		
Number	Thread	Sq. In.	BTU/Hr.*	L	D	T	Ounces
1-K	3/8	.0140	2,900	45/64	21/32	13/32	1/2
2-K	1/2	.0222	5,000	9/16	13/16	11/32	3/4
3-K	3/4	.0453	9,000	23/32	1-1/64	7/16	1-1/2
4-K	1	.0595	10,800	3/4	1-5/16	9/16	2-1/4
5-K	1-1/4	.0808	16,800	15/16	1-5/8	9/16	4-1/4
6-K	1-1/2	.1221	24,000	1	1-7/8	19/32	6

NOTE: All dimensions are in inches.

*Based on full gas/air ratios at 5" w.c., operating in enclosed space.

If burning in open, increase capacities 20%.

ECLIPSE STANDARD STEEL TIPS








In both the commercial and industrial field, there is a large demand for various types of small blast burners. Most of these needs can be handled by a number of tips arranged in groups or combinations.

The Standard Steel Blast Tip consists of two pieces, a hexagonally shaped head with drilled ports and a protective steel ring. These tips are accurately machined and drilled and furnished only with $\frac{3}{8}$ " pipe thread.

The Standard Steel Tips are recommended for use in combustion chambers where they are not exposed to high radiant

heat and the ambient temperature does not exceed 600°F. Where tips are being used in combustion work at higher temperatures and the chamber is not supplied with ample secondary air, alloy rings are recommended. For extreme cases, calorized steel is much superior and will have longer life.

Being small, Standard Steel Tips enable the engineer to make any shape of burner required to fit the job. They are used on pipe burners giving high capacity with exceptionally good turndown range. The cupped feature prevents the flame from blowing off and enables them to be used in close combustion chambers where other types of tips would soon go out. The best applications of these tips will be found on low temperature operations such as candy furnaces, smokehouses, tank heaters, and core ovens.



DIMENSIONS & SPECIFICATIONS

Catalog		Size of	Burner Area.	Capacities	Di	Weight Each			
Number	Description	Pipe Thd.	Sq. In.	BTU/Hr.*	Н	L	D	Ounces	
20-ST	Standard Blast Tip and Alloy Ring	3/8	.0588	12,000	9/16	1-1/4	1	1-3/4	
21-R 22-R	Steel Ring for No. 10ST Alloy Ring for No. 20ST	_	_		_	5/8 5/8	1	3/4 3/4	

NOTE: All dimensions are in inches. *Based on full gas/air ratios at 5" w.c.

ECLIPSE LAVA BLAST BURNER TIPS

For Use On Natural Gas Only







For many of the industrial applications, combustion engineers have found Lava Burner Tips preferable to steel and alloy tips. The lava tip is non-corrosive, will not oxidize, soot or otherwise become clogged. It retains its shape at all temperatures up to 2000°F. and where the ambient temperature exceeds 600°F., it will outlast metal tips and drilled pipe burners many times.

CONSTRUCTION

The construction of the lava tip is very simple. On the base, the passages are drilled on a slight angle with the vertical in order to cause the individual gas streams to impinge against the side wall, producing eddy currents and forming a small ignition chamber which retains the combustion, keeping the flames from blowing away.


APPLICATION

Lava Burner characteristics are particularly suitable to higher temperature ovens and furnaces and wherever corrosive gases are present. In the ceramic and chemical industries, many applications will suggest themselves. There are unlimited applications such as electrotype furnaces, core ovens, boiling vats, etc., familiar to every combustion engineer.

INSTALLATION

It is standard practice to insert Lava Tips in standard malleable iron reducing couplings or reduced street elbows. Special holder castings are sometimes used where added protection is required due to mechanical shocks.

In making up the pipe burner, a small amount of pipe fitters cement or lead in oil is placed on the threads of the lava tip, and then the tip screwed into the mounting fitting by hand. Do not use any type of wrench, do not tighten excessively! The cement or lead allows for the difference in expansion or contraction between the two materials.



DIMENSIONS & SPECIFICATIONS

Catalog		Size of	Burner Area,	Capacities	D	Weight Each		
Number		Pipe Thd.	Sq. In.	BTU/Hr.	Н	L	Đ	Ounces
2-N	Countersunk Lava Tip	1-1/4	.0848	20,000	9/16	1-7/16	1-5/8	3-1/4

NOTE: All dimensions are in inches. *Based on full gas/air ratios at 5" w.c.

GAS-MIXTURE CAPACITY OF STANDARD PIPE

The most common application for tips in ovens of various sorts where long pipe burners are used to secure proper heat distribution over long lengths. To secure uniform length of flame throughout the entire burner length, it is important that

certain factors of pipe size and capacity be observed. The table below shows the amount of total mixture that can be handled by various pipe sizes based on a velocity pressure of .3" to .5" which is usually satisfactory.

Pipe Size, Inches	1	1-1/4	1-1/2	2	2-1/2	3	4	5	6
Mixture in CF/HR	800	1500	2200	3500	5500	8000	13,000	30,000	50.000



Offered By:

Power Equipment Company 2011 Williamsburg Road Richmond, VA 23231

Phone: 804-236-3800 Fax: 804-236-3882

www.peconet.com