

# Eclipse ThermJet Burners

## for Preheated Combustion Air

Model TJPCA1500


Version 2

Parameter			Specifications		
			Natural Gas	Propane	Butane
<b>Maximum Input BTU/hr (kW)</b>			15,000,000 (4395)	15,000,000 (4395)	15,000,000 (4395)
<b>Minimum Input, On-Ratio BTU/hr (kW)</b>			1,500,000 (440)	1,500,000 (440)	1,500,000 (440)
<b>Gas Inlet Pressure Required "w.c. (mbar)</b> <b>Fuel Pressure at Gas Inlet</b> <i>(Tap "B" - see page 3)</i>	<b>Combustion Air Temp</b>	<b>Ambient</b>	3.7 (9.2)	3.7 (9.2)	3.7 (9.2)
		<b>300°F (150°C)</b>	5.5 (13.6)	5.5 (13.6)	5.5 (13.6)
		<b>700°F (370°C)</b>	8.8 (21.7)	8.8 (21.7)	8.8 (21.7)
		<b>1000°F (540°C)</b>	11.2 (27.8)	11.2 (27.8)	11.2 (27.8)
<b>Air Inlet Pressure Required "w.c. (mbar)</b> <b>15% Excess Air at Maximum Input</b> <i>(Tap "A" - see page 3)</i>	<b>Combustion Air Temp</b>	<b>Ambient</b>	4.4 (10.9)	4.4 (10.9)	4.4 (10.9)
		<b>300°F (150°C)</b>	6.2 (15.4)	6.2 (15.4)	6.2 (15.4)
		<b>700°F (370°C)</b>	9.5 (23.5)	9.5 (23.5)	9.5 (23.5)
		<b>1000°F (540°C)</b>	11.9 (29.5)	11.9 (29.5)	11.9 (29.5)
<b>High Fire Flame Length Inches (mm)</b> <i>(Measured from End of Combustor)</i>			<144.0 (3660)	<185.0 (4700)	<185.0 (4700)
<b>Flame Detection</b>			UV scanner available for all combustors.		
<b>Fuel</b> <i>For any other mixed gas, contact Eclipse for orifice sizing.</i>			Natural gas, propane, or butane.		


- All information is based on laboratory testing in neutral (0.0" w.c.) pressure chamber. Different chamber size and conditions may affect the data.
- All information is based on standard combustor design. Changes in combustor will alter performance and pressures.
- All inputs based upon gross calorific values.
- Eclipse reserves the right to change the construction and/or configuration of our products at any time without being obliged to adjust earlier supplies accordingly.
- Plumbing of air and gas will affect accuracy of orifice readings. All information is based on generally acceptable air and gas piping practices.

## Performance Graphs

### Ignition & Operational Zones

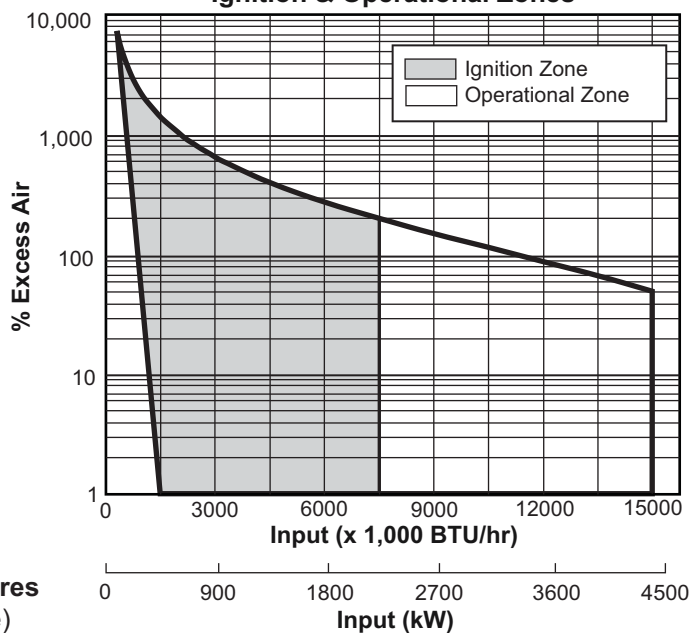

### NO<sub>x</sub> vs Preheated Air Temperatures (Based on Maximum Firing Rate)

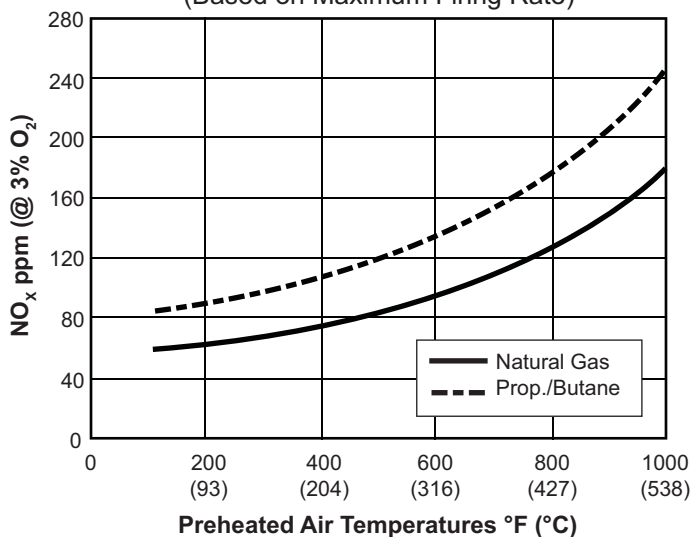


Emissions from the burner are influenced by:


- Fuel type
- Combustion air temperature
- Firing rate
- Chamber conditions
- Percent of excess air

For estimates of other emissions, contact Eclipse.

### Gas Orifice ΔP vs. Input (Measured from Tap B to Tap D)

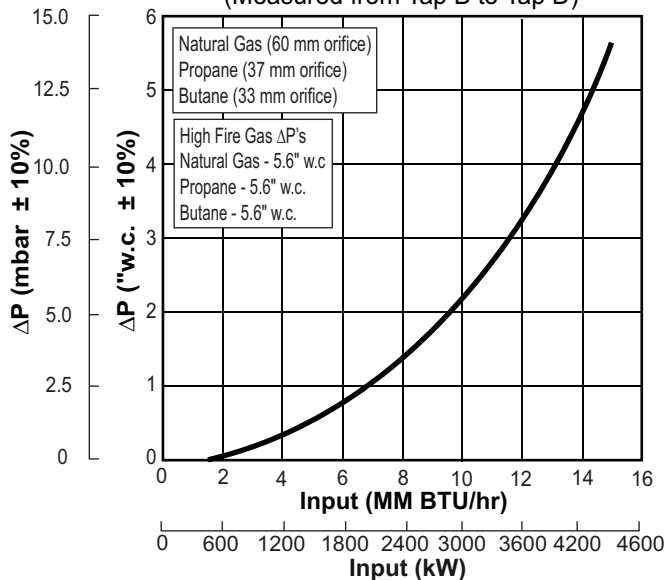


## Dimensions in inches (mm)

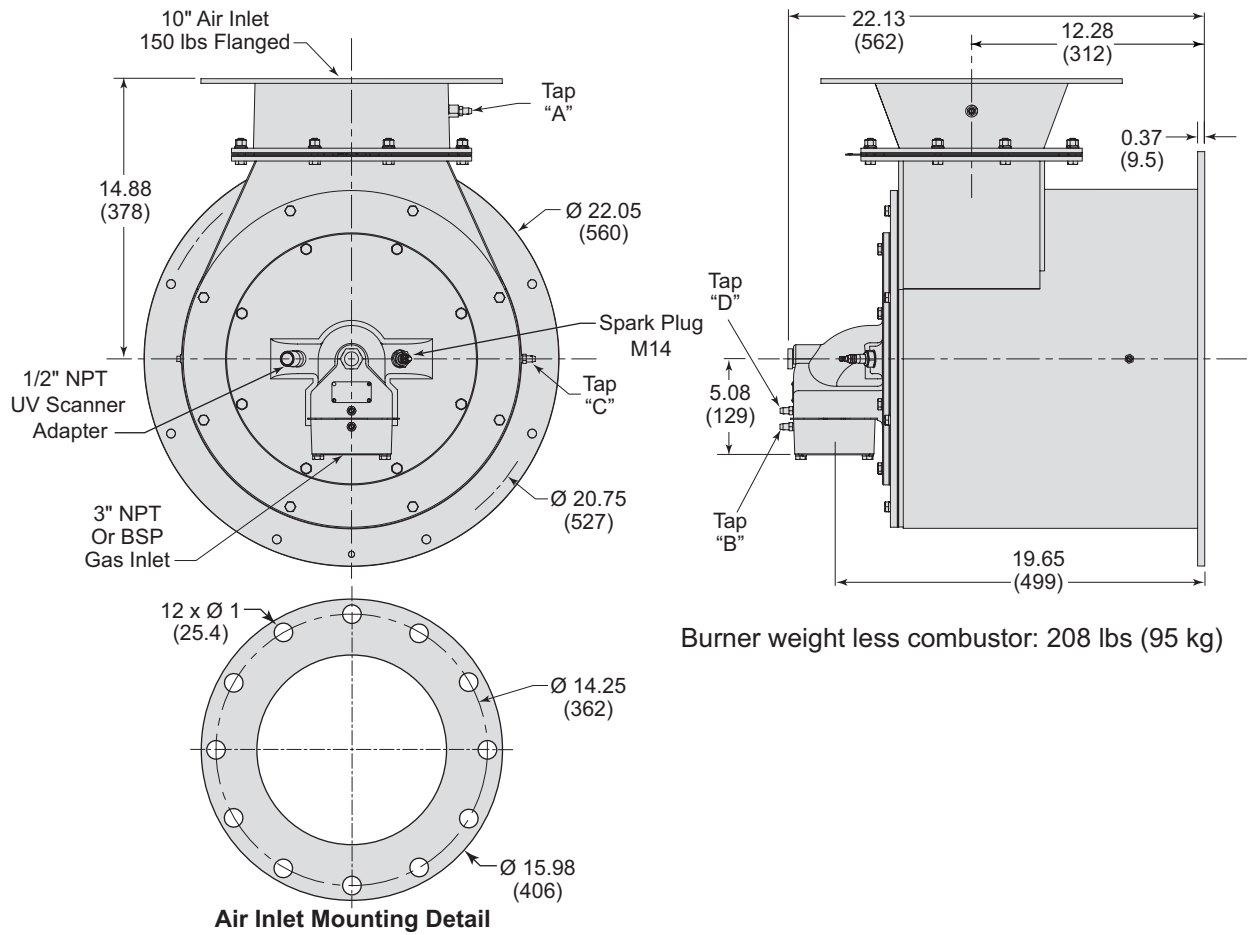

Burner weight less combustor: 208 lbs (95 kg)

### Combustor

Exhaust Outlet Diameter - Medium Velocity (Straight): Ø 15.16 (385)

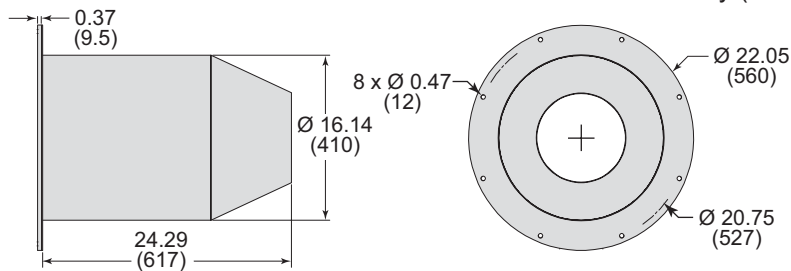


#### **Alloy Tube (AISI 310)**

Weight: 44 lbs (20 kg)

Max. Chamber Temp: 1,750°F (950°C)

(Not suitable for preheated air over 700°F)

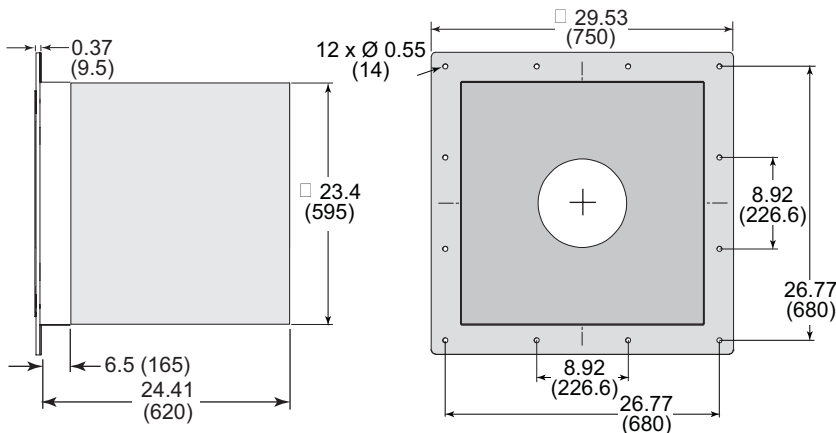


#### **Refractory Block**

(w/330 SS wrapper)

Weight: 1000 lbs (454 kg)

Max. Chamber Temp: 2,800°F (1535°C)

# Down Firing Block

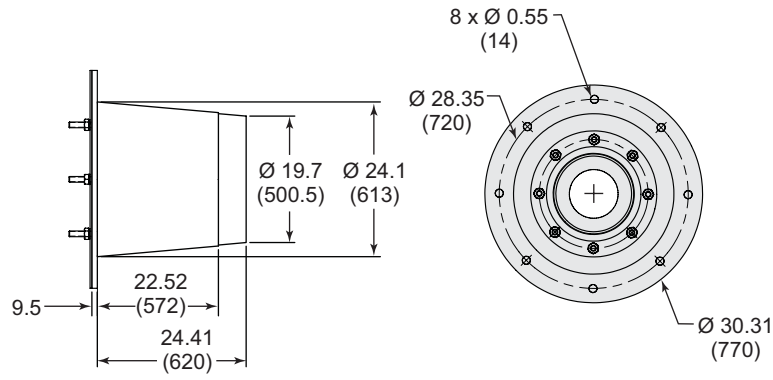

Weight: 610 lbs (276.69 kg)  
Max. Chamber Temp: 2800°F (1535°C)



**Offered By:**

Power Equipment Company  
2011 Williamsburg Road  
Richmond, Virginia 23231  
Phone (804) 236-3800  
Fax (804) 236-3882

---

[www.peconet.com](http://www.peconet.com)